




# Installing the OMS<sup>®</sup> Cummerbund

## OMS Cummerbund Kit (part #BCA-CBD2)

The OMS<sup>®</sup> Cummerbund is designed to be used with OMS<sup>®</sup> Harnesses and IQ Packs.

1. First orient the two halves of the cummerbund to identify the right and left halves. The half with the zipper pocket facing forward will be the diver's right side. The forward side of the left half can be identified by the large area of Velcro.

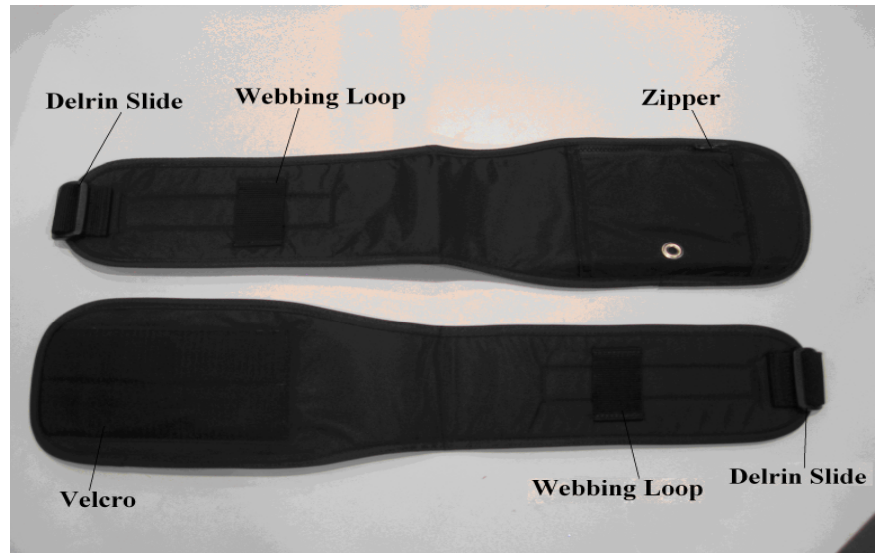

2. Remove the belt buckle and all D-rings from the waist band of the harness. On the IQ Pack, the waist band must be unthreaded from a loop of webbing sewn into the back pad.

3. Thread waist band through Delrin slide at the back of the cummerbund. A D-ring can be added as in the photo. Pay close attention to the orientation of the cummerbund front to back. The zipper pocket goes on the diver's right with the pocket outward.



4. After threading through the Delrin slide, feed the waist band through nylon web loop sewn onto the front of the cummerbund. There is a Velcro attachment point on the underside of the cummerbund that is used only with the OMS IQ pack. It is not used when installed in a plate type harness system.

### **For installation in the OMS® IQ Pack:**

5. Open the Velcro attachment under the cummerbund, peeling front to back. Pass the free flap through the nylon web loop that previously held the waist band. Close the Velcro over the web loop so it lays flat.

